



**6 AND 10 RIB GEN 5
WHIPPLE
MFP CRANK SUPPORT**


**Parts
&
Instructions**

PARTS

1. MAIN PLATE




2. DOUBLE POST STANDS

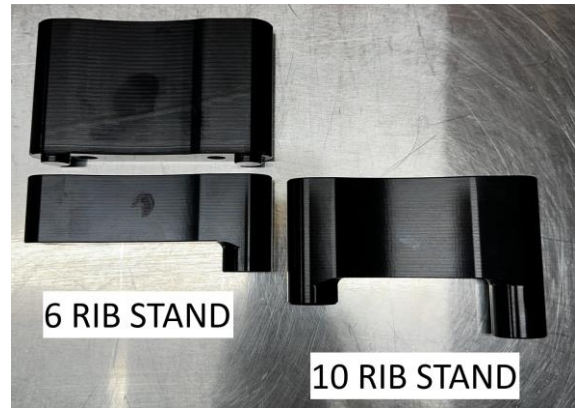

3. BEARING RETAINER



4. STAND AND DOGLEG

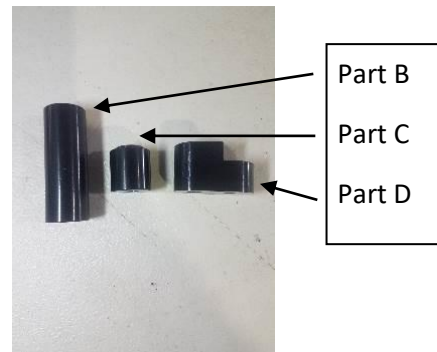

5. CRANK SNOUT



6RIB

Bolt A M8x70MM

Bolts B

UNI STAND 2 X M8x70MM

6 RIB 2 X M8X70MM

Bolt C M8x90mm

Bolt D M8x55mm

4 X M8X25MM

8 X M6x20mm SHCS

Washer for Hub

10RIB

Bolt A M8x70MM

Bolts B

UNI STAND 2 X M8x70MM

10 RIB 2 X M8X100MM

Bolt C M8x120mm

Bolt D M8x80mm

4 X M8X25MM

8 X M6x20mm SHCS

Washer for Hub


Installation:

Remove crank bolt and install crank snout, we also recommend fitting a crank STUD from either Kinetik or FFRE.

Front View



Above View

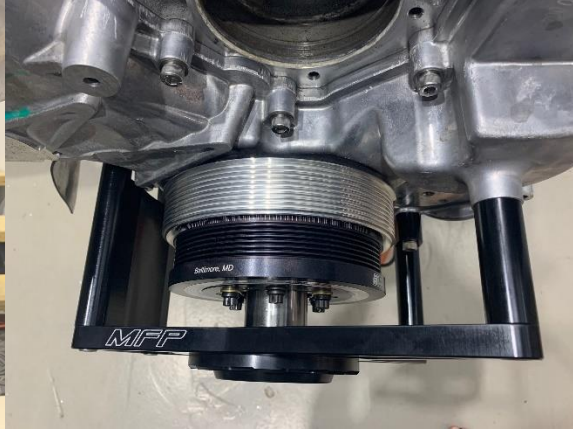

Side View



Side View



BEARING RETAINER MUST BE TIGHTENED BY INSTALLER WITH LOCTITE, IT IS ONLY LOOSELY TIGHTENED INTO THE MAIN PLATE FOR EASE OF PACKAGING

Crank snout into bearing retainer

