




### 2015+ Mustang IAT Kit Installation Instructions

1. Carefully open & take out the supplied harness & temperature sensor.
2. Locate the male end on the Y-section of the harness & plug it into your OEM MAF harness. Then, connect the female end to the MAF itself.

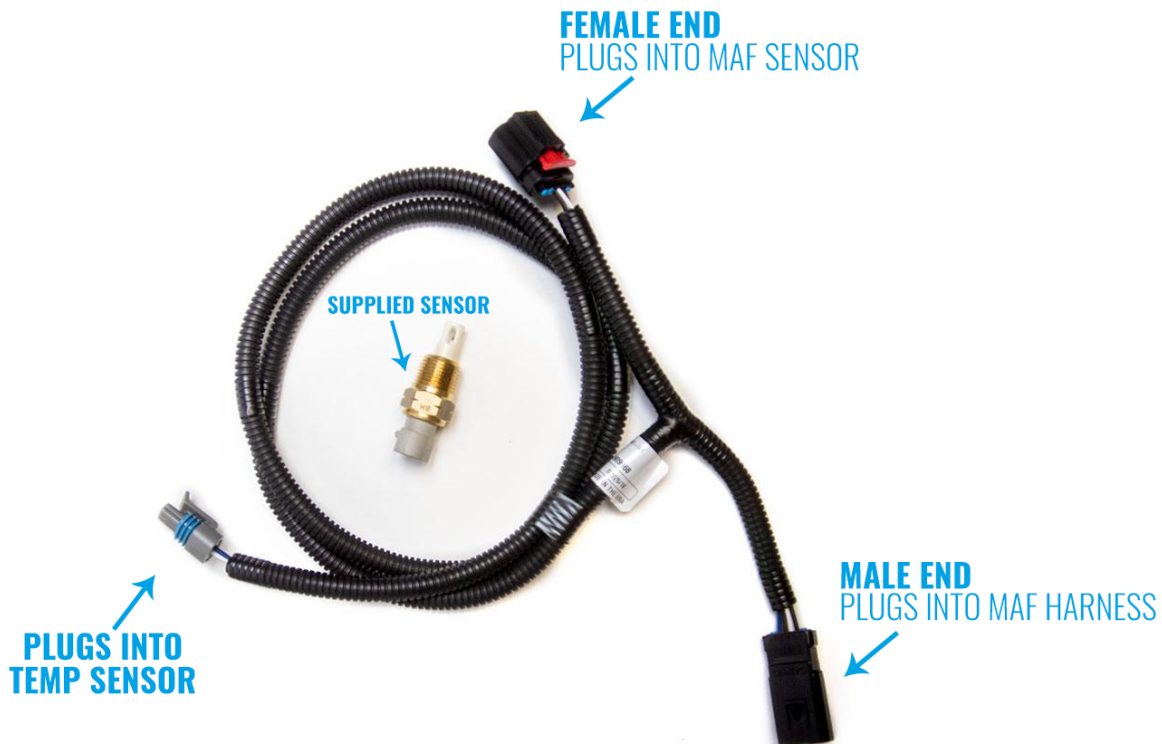

3. Feed the long end of the harness underneath the inlet of the supercharger through to the passenger side of the vehicle. Be sure the harness will not touch or interfere with the headers or other parts.
4. Remove the factor temperature sensor from the passenger side of the intake manifold. Replace it with the provided sensor.
5. You will now plug the end of the harness that you fed under the inlet into the new sensor.
6. Double check all of your connections & you are good to go!