


MIRROR CAP INSTALL/REMOVAL

2021+ FORD BRONCO (ALL MODELS AND TRIM LEVELS)



1. IDENTIFY THE 4 TABS AROUND THE EDGE OF THE MIRROR HOLDING ON THE MIRROR CAP.

2. STARTING WITH 1 CORNER, PUSH THE TAB DOWN AND PULL BACK ON THE MIRROR CAP. A SMALL SPLIT BETWEEN THE CAP AND FRAME SHOULD START.

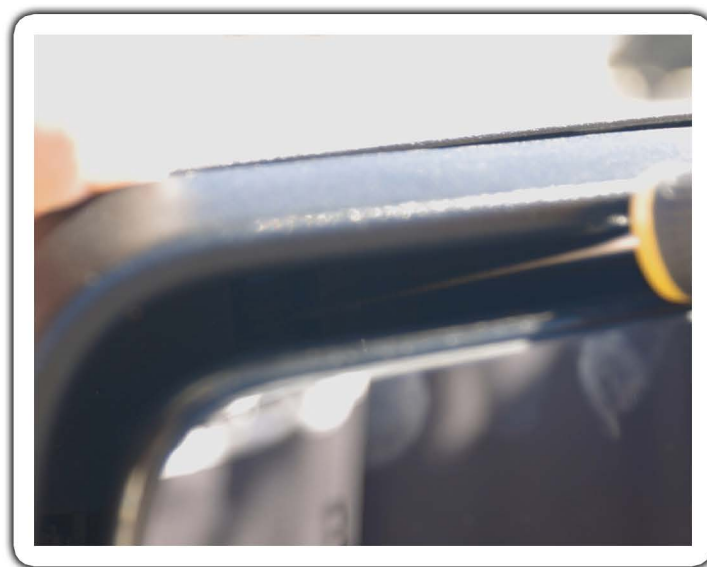

3. CONTINUE TO THE NEXT NEAREST TAB AND REPEAT PROCESS.

MIRROR CAP INSTALL/REMOVAL

2021+ FORD BRONCO (ALL MODELS AND TRIM LEVELS)



4. ONCE THE CAP IS OFF OF THE FRAME, PRESS THE HOLDING TABS AND REMOVE THE TURN SIGNAL & PUDDLE LIGHT.

5. INSTALL THE TURN SIGNAL AND PUDDLE LIGHT ONTO THE NEW PAINT-MATCHED ASSEMBLY.

6. LINE UP EACH OF THE 4 TABS AND INSTALL THE MIRROR COVER. MAKE SURE TO WATCH THE TURN SIGNAL EDGE, AS THIS HAS A SPECIFIC GROOVE IT NEEDS TO FIT INTO TO INSTALL FULLY.

