


CUT THE GREEN/YELLOW WIRE ROUGHLY 2" OUT FROM THE FPDM CONNECTOR

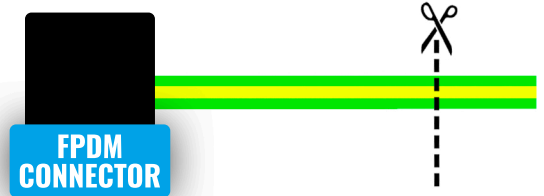


SPLICE THE ORANGE WIRE TO THE LENGTH OF GREEN/YELLOW WIRE COMING FROM THE CONNECTOR

LEADS BACK INTO HARNESS

SPLICE THE RED WIRE TO THE LENGTH OF GREEN/YELLOW WIRE RETURNING BACK TO THE HARNESS

CUT THE CONNECTOR OFF OF THE FPDM HARNESS

GROUND THE BLACK WIRE NEAR THE FPDM

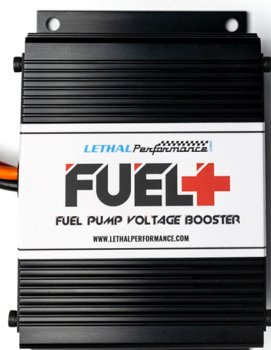

REPLACE THIS FUSE WITH THE PROVIDED 40AMP FUSE

