



Lethal Performance Paint Matched Door Handles

Installation Instructions

2021+ Ford Bronco and F150

Tools Needed:

- 5mm Socket
- Ratchet
- 8" (or longer) extension

NOTE: MAKE SURE CHILD LOCK IS DISENGAGED PRIOR TO INSTALLATION. Failure to disengage the child lock may result in damage to your handle's mechanism.

Installation

1. Open the door and locate the access grommet (see Figure 1). Remove this grommet to reveal a 5mm bolt (see Figure 2).
2. Using a 5mm socket and extension, begin to unscrew the bolt until you hear a small click. Once you hear the click, the bolt is fully unthreaded and the door handle is loose.



Figure 1

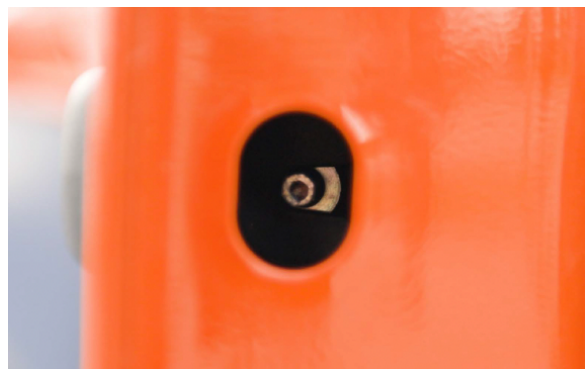


Figure 2

3. Pull on the handle, as if you were opening the door, until it pops out of place. Once popped, you can remove the handle from it's groove. If it is a handle equipped with an electronic lock, unclip the harness.



4. Now it is time to install your new handle. When placing the new door handle, do not push into place. Place the handle in the correct position (pushing or forcing the handle in may lead to the mechanism separating) and begin to tighten the 5mm bolt; this will seat the handle. **DO NOT OVERTIGHTEN.** This bolt is threading into plastic; overtightening can cause damage.
5. Repeat steps on all door handles until all handles have been replaced.
6. Enjoy the new look on your ride! [#teamlethal](#)

Thank you for purchasing our Lethal Performance paint matched door handles. If you have any questions during your installation, please give us a call at 561-753-8105.