



# Shelby Iso-Clutch

## Isolated Clutch Fluid Reservoir

Installation Instructions

Application: 2010-2014 Mustang

**ATTENTION!!!! DO NOT DEPRESS CLUTCH DURING INSTALLATION PROCESS.**

10mm Bolt



Rubber Cone Seal



Rubber Cover Boot



Clip Nut



### NOTES:

**Read All Instructions Before Beginning Installation**

#### Tools Needed:

13 mm deep socket

1/4" drive

10 mm socket

Standard Pliers

Rag or Tissue

To place an order, or for current pricing, call Shelby Performance Parts. For a list of availability or for any other questions about Shelby Performance Parts or our products, visit [ShelbyPerformanceParts.com](http://ShelbyPerformanceParts.com) or call our customer service department toll free:

1.702.405.3500 Mon-Fri 8:00 a.m. to 4:30 p.m. - PST

6405 Ensworth St.  
Las Vegas, NV 89119


t: 1.702.405.3500

**ATTENTION!!!! DO NOT DEPRESS CLUTCH DURING INSTALLATION PROCESS.**


**Step 1:** Place rag below the clutch fluid hose. Slide the clamp and remove the hose from master cylinder.



**Step 2:** Install the rubber cone seal. Once in place, install the rubber cover boot to ensure seal.

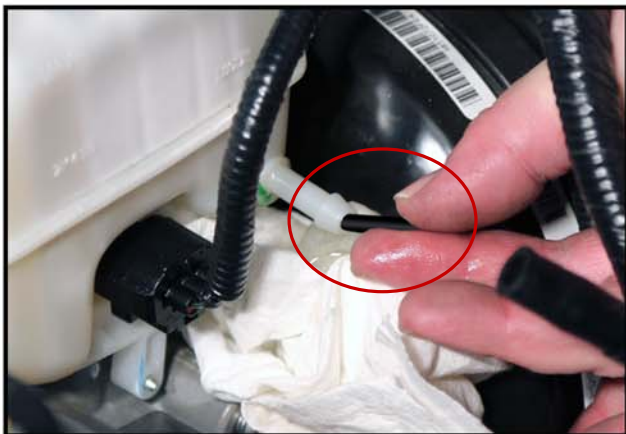

**Step 3:** Remove the lower nut from master cylinder with 13mm socket. Next install the clip nut into the existing hole behind shock tower.

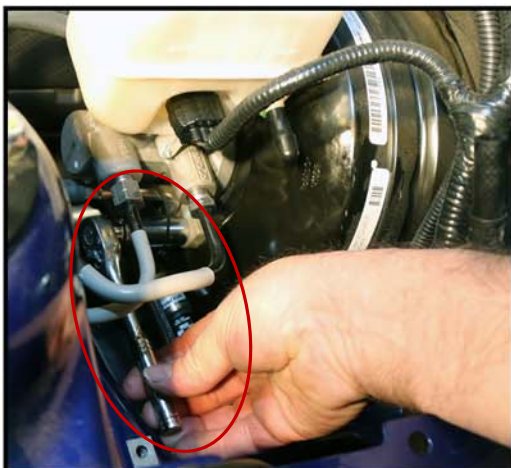



**ATTENTION!!!! DO NOT DEPRESS CLUTCH DURING INSTALLATION PROCESS.**

**Step 4:** Install isolated clutch bracket over the master cylinder stud. Install 10mm bolt into clip nut



**Step 5:** Install hose on to new reservoir fitting. First slide tube in to place, then reinstall clamp in stock location.



**Step 6:** Once installation is complete, fill new reservoir with DOT 3 brake fluid. Finally, pump clutch two or three times to ensure proper disengagement.